



COUPLING INSTALLATION

It is very important to maintain a gap of 0.070" to 0.10" between the two halves of the coupling to achieve proper pump operations and avoid any pump failures. Please use a feeler gauge as shown in the picture to maintain this gap.

